

# DIGITAL DUROMETER INSTRUCTIONS



- Turn durometer on and off with ON/OFF button in middle below display. There is no automatic shut off. Be certain unit is off after use or the battery will drain prematurely.
- If needed, push the ZERO button on right side. It may be occasionally necessary to re-zero while in use.
- The “H” button on the left freezes the display. Push to hold, push again to resume normal function.
- Check your tires in several places and take an average. Racing tire hardness varies in different places on the tire. This is true of almost all tires and is normal.
- Depending on how you hold the durometer in use, avoid accidentally pushing the ZERO button, usually with your thumb. Re-zero if needed.
- Replace battery as needed when display gets dim. Batter holder is along the top of the body, just above the display. Replace with a quality LR44 alkaline battery. Be sure to install it correctly. DO NOT REMOVE THE BACK COVER.
- DO NOT DROP THE UNIT. KEEP IT CLEAN AND DRY. DO NOT EXPOSE TO STRONG ELECTROMAGNETIC FIELDS (such as caster/camber gauge magnets.)
- If you use tire softener, the rubber dissolved in the liquid may get between the pin and the body causing sticky action and incorrect readings. Clean with lacquer thinner, holding the durometer upright to avoid having any liquid run down the pin and inside the unit.

Longacre Racing Products  
977 Hyrock Blvd.  
Boonville, IN 47601

LongacreRacing.com

800-423-3110



LIT-5227 REV A

# DIGITAL DUROMETER INSTRUCTIONS



- Turn durometer on and off with ON/OFF button in middle below display. There is no automatic shut off. Be certain unit is off after use or the battery will drain prematurely.
- If needed, push the ZERO button on right side. It may be occasionally necessary to re-zero while in use.
- The “H” button on the left freezes the display. Push to hold, push again to resume normal function.
- Check your tires in several places and take an average. Racing tire hardness varies in different places on the tire. This is true of almost all tires and is normal.
- Depending on how you hold the durometer in use, avoid accidentally pushing the ZERO button, usually with your thumb. Re-zero if needed.
- Replace battery as needed when display gets dim. Batter holder is along the top of the body, just above the display. Replace with a quality LR44 alkaline battery. Be sure to install it correctly. DO NOT REMOVE THE BACK COVER.
- DO NOT DROP THE UNIT. KEEP IT CLEAN AND DRY. DO NOT EXPOSE TO STRONG ELECTROMAGNETIC FIELDS (such as caster/camber gauge magnets.)
- If you use tire softener, the rubber dissolved in the liquid may get between the pin and the body causing sticky action and incorrect readings. Clean with lacquer thinner, holding the durometer upright to avoid having any liquid run down the pin and inside the unit.

Longacre Racing Products  
977 Hyrock Blvd.  
Boonville, IN 47601

LongacreRacing.com

800-423-3110



LIT-5227 REV A