

Instructions for Model No. 72602 & 72607

12/05

- 1) Set up pads along side car. Scale pads are marked RF, LR, etc. They are closely matched and can be interchanged if desired.
- 2) Connect cables from control box - note RF, LR, LF, etc. The locking nut on the connector can be used or not.
- 3) Turn on control box, allow to warm up for a few seconds. Push Zero. This defines "0" weight. Don't push Zero after car is on scales.
- 4) Lift car and place pads under wheels. For more accurate readings "shake" car up & down at each corner to settle out any shock or suspension friction.

Call, FAX, or e-mail
if you have any questions
or problems.

- Keep the system clean and dry. Do not drop either the pads or the control box.
- Route the cables so that no one trips and they do not get run over by floor jacks.
- Store in a clean dry place. Recharge the battery as needed or at least every 60 days.
- A cable disconnected is indicated by "- -". Scale capacity is 1500 lbs. per wheel.
- Keep away from static electricity. • System can be set for Metric readout. See reverse.

Longacre
Longacre Racing Products, Inc.
16892 146th St SE, Monroe, Wa. 98272
(360) 453 2030 FAX (360) 453 2031
www.longacracing.com

Green LEDs:
Indicate which
wheels are selected
for partial % - Left,
Rear, Cross, etc.


Shows Low Batt.:
on display when battery needs
recharge (scale will still run 1+
hours). Charge for 12-24 hours.
Scale can be run on charger.
Charge with scales off.

Connect charger in front.

Charge at least every 60 days.
It will extend the battery's life.

Emergency Power Supply (72607 only):

When battery is low and
you don't have power to
run the charger install an
9 volt alkaline battery in
the holder on the front by
the charger jack. Don't
leave a battery in the
holder. The scale will
draw the power from it
when turned on.

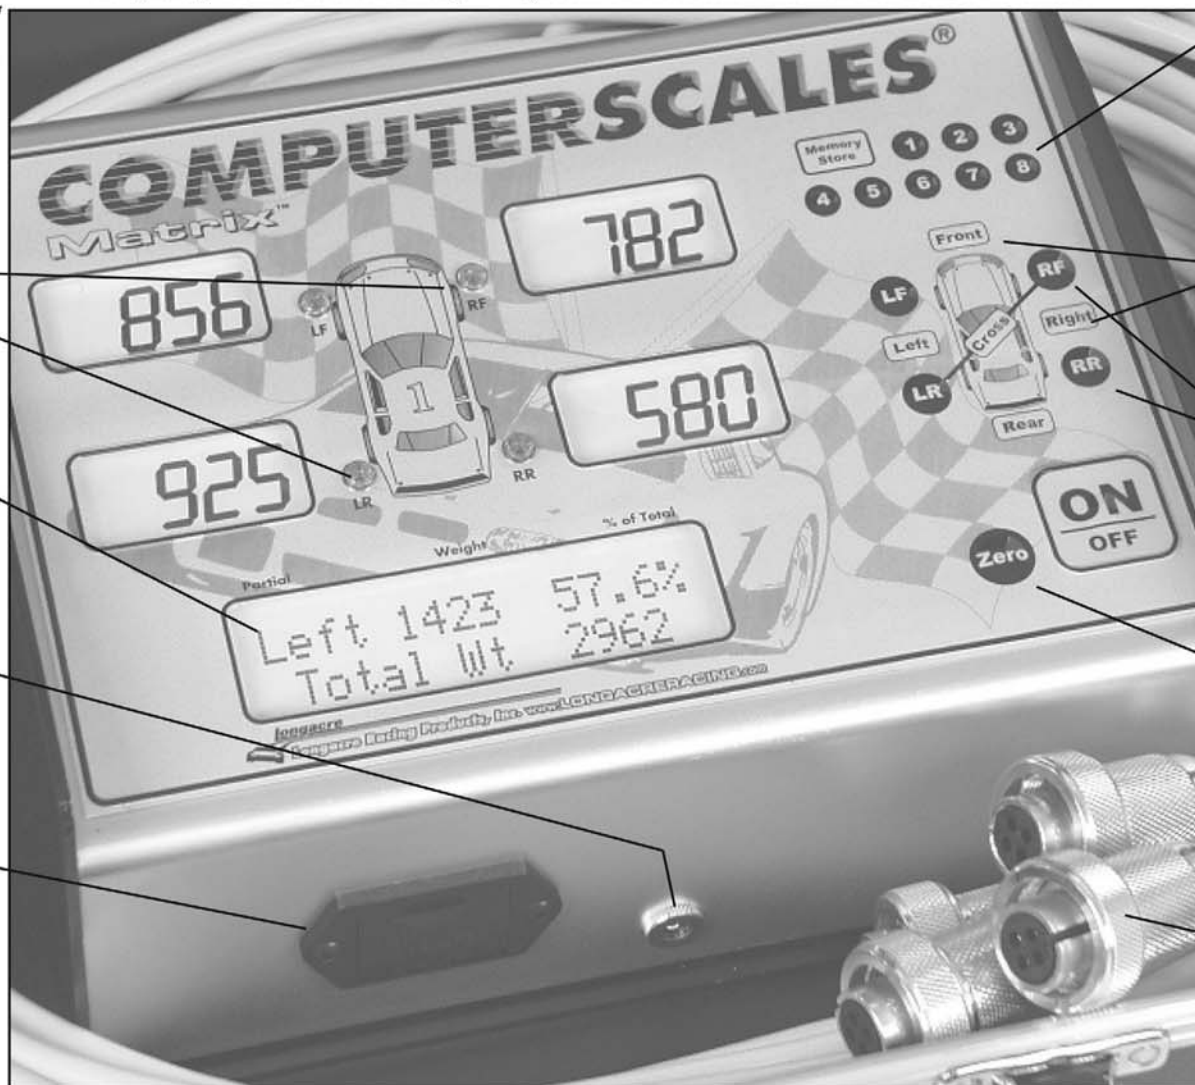

Memory:
To store weights in
Memory push & hold
Memory Store button
and push #1 - 8.
To recall push and
hold #1 - 8.

**Pre-Programed
Wheel Switches:**
Just push 1 button to
get any % you want.

Wheel Switches:
Use to select which
% you want. To get
any % turn on those
wheels (indicated by
green LEDs) and turn
off the others.

Zero:
Push **BEFORE**
putting car on
scales.
DON'T push Zero
AFTER car is on
scales. This de-
fines zero weight.

**Cable to Pad
Connections:**
The locking nuts
(72607 only) can be
used or not as you
prefer.