



PRO DIGITAL TIRE PRESSURE GAUGE 0-4 BAR

INSTRUCTIONS

QUICK START INSTRUCTIONS

- Turn gauge on and push ZERO button if needed.
- Firmly press the chuck onto your valve stem to create a tight airless seal.
- Read your tire pressure – Reads to .01 BAR.
- To release air from your tire, simply push the release valve button just below the gauge head.
- Continue until desired pressure is obtained.

**DO NOT EXCEED MAXIMUM
PRESSURE OF 4 BAR**

WARNING

DO NOT DROP THE UNIT OR
LET IT GET WET.
AVOID EXPOSURE TO STRONG ELECTRO
OR MAGNETIC FIELDS.
(Ex. Caster/Camber gauge magnets)
EXCEEDING THE MAXIMUM PRESSURE
RATING OF 4 BAR MAY DAMAGE
THE GAUGE.
GAUGE OPERATING TEMPERATURE
RANGE: 0-54° C.

GAUGE INSTRUCTIONS

AUTO SHUTOFF

Gauge shuts off automatically when not in use (pressure changes) and can be set by the user.

1. Turn the gauge on.
2. Press and hold the ON/OFF button for a few seconds until the display changes and starts flashing.
3. Tap the ON/OFF button to scroll through the shutoff time options until you find the one you want (30/60/90/180 seconds).
4. Gauge will return to normal function after 3 seconds and store your choice.


CONVERTING TO ENGLISH

The gauge can read pressure in PSI, BAR & kPa as set by the user.

1. Turn the gauge on.
2. Press and hold the ZERO button for a few seconds until the display starts flashing.
3. Tap the ZERO button to scroll through the options (units are displayed on the right side) until you find the one you want (PSI, BAR, kPa).
4. Gauge will return to normal function after 3 seconds and store your choice.

BATTERY REPLACEMENT

Battery indicator is located on the upper right side of the display. When needed replace with 2 quality AAA alkaline batteries. Pull back the rubber bumper to access the battery door on the back of the gauge.

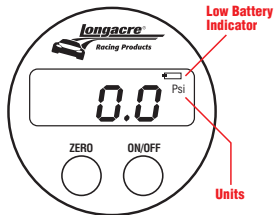

CHANGING YOUR CHUCK

The gauge comes installed with a swivel angle chuck and includes an alternate ball chuck. Ball chuck requires 3/4" wrench. Angle chuck requires 5/8" wrench.

1. With a wrench and a pair of pliers or vice grips, separate the chuck from the serrated portion of the hose end.
2. When re-installing the chuck you may want to add some Teflon tape to the threads. We recommend using a rag to protect the serrated portion before using your pliers.