

**Longacre®**



Longacre Racing Products, Inc.  
Monroe, Wa. 360 453 2030 www.longacracing.com

Cordless Pit Gun - Models 68602 - 68610

## Quick Start Insts.

■ **Charge Batteries** - Insert battery into charger and plug cord into wall. Red lite on charger will indicating charging. Green lite will come on when charging is done.

(If red lite is not on battery is NOT charging. Charge time is approx. 1 hour)


- **Disconnect battery from gun by pressing on both sides of battery at the same time in the grey area inside the yellow.**
- If batteries sit unused for more than 2 months recharge.
- Let a hot battery cool down before recharging.

■ **Using Gun** - Forward and reverse are controled by the side-to-side button above the variable speed trigger. Middle position is off. Don't switch with trigger pulled.

• Gun is designed for normal to heavy duty use on a race car. If gun becomes too warm to comfortably hold let it cool off before further use.

■ **Care** - Always use eye protection. Keep gun, batteries, & charger clean and dry. **Do not drop.** See full instructions for important safety & maintnance information.

**NOTE:** - The variable speed trigger reduces the "kick" when you pull the trigger with no load. It does not affect torque.

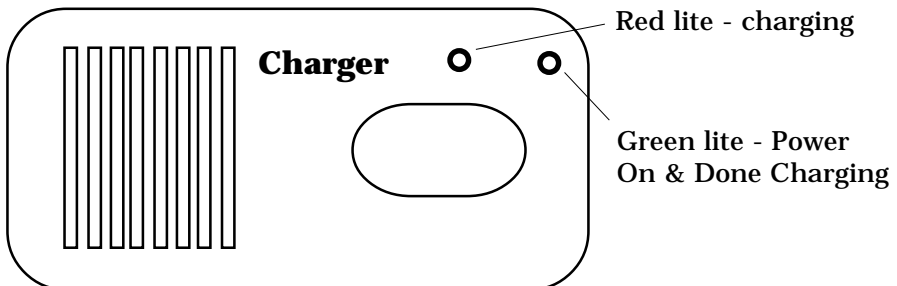

# ***Charge batteries before use.***

It may take 2 or 3 full charges to get full battery capacity on new batteries.