




Dual Function IR Laser Pyrometer #50620

Quick Start Instructions

(See full instructions for other functions)

- Batteries install in handle. Use 2) AAA alkaline. Low Battery is shown on display (see full insts.).
- Push **Mode** button until **PRB** (stands for 'probe') shows on upper left of display (if not there already) .
- To operate IR Laser pyrometer function simply aim, pull & hold trigger (use laser to help aim). Temps will be displayed as shown. Release trigger to freeze temps. Pull trigger again to take new temps.
 (NOTE: to turn Laser or back light On or Off see full insts., lower left - this needs to be done each time battery is changed)
- To take temps using tire probe simply plug probe into handle just below trigger. Note wide and narrow spades. Narrow is +. Probe temps are displayed as shown at right.
- Pyrometer shuts off by itself after several minutes.

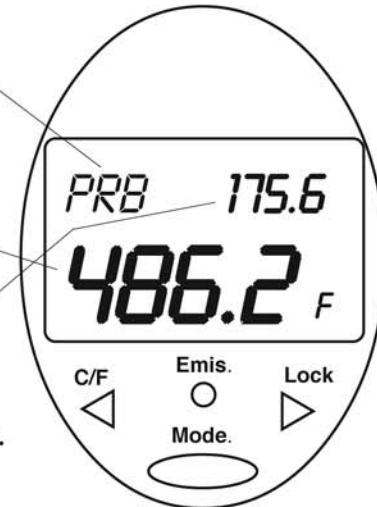

See "Laser Warning". Keep unit clean and dry. Be careful with tire probe tip. To give fast response it must be small & delicate and can be broken if abused.