



Cordless Pit Gun - Models 68502, 68504, 68510

Quick Start Insts.

■ **Charge Batteries** - Insert battery into charger and plug cord into wall. Green lite on charger will come on. **Push yellow 'Set' button to start charging.** Red lite will come on during charging. Green lite will come back on when charging is done. (If red lite is not on battery is NOT charging)

- **Disconnect battery from gun by pressing areas marked PUSH on both sides of battery at the same time.**
- If batteries sit unused for more than 2 months recharge.
- Let a hot battery cool down before recharging.
- If red and green lites flash alternately battery is bad.

■ **Using Gun** - Forward and reverse are controlled by the side-to-side button just above the trigger. Middle position is off. Don't switch with trigger pulled.

- Gun is designed for normal to heavy duty use on a race car. If gun becomes too warm to comfortably hold let it cool off before further use.

■ **Care** - Always use eye protection. Keep gun, batteries, & charger clean and dry. **Do not drop.** See full instructions for important safety & maintenance information.

