

This harness connects Longacre switch panels to your car. If you have just purchased a switch panel, discard the half of the connector with 3 unconnected wires.

Brown wire – to battery or power source (you can pickup power at the starter motor.) The larger ring terminal goes to the battery cable terminal.

Two Yellow wires – one wire to ignition system; one wire to any accessory you want to shut off with the ignition – gauge and warning lights, tach, etc. (NOTE: Both yellow wires are connected to the same source. Two separate wires are provided for your convenience.)

Green wire - to starter motor or solenoid. The smaller ring terminal goes to the solenoid.

Use a grommet where the wire goes through the firewall or any other sheet metal. If the headers are very close to the starter motor (& this harness) you may need additional heat insulation. Longacre offers Firebraid[™] insulation - See LongacreRacing.com for info.







This harness connects Longacre switch panels to your car. If you have just purchased a switch panel, discard the half of the connector with 3 unconnected wires.

- **Brown wire** to battery or power source (you can pickup power at the starter motor.) The larger ring terminal goes to the battery cable terminal.
- Two Yellow wires one wire to ignition system; one wire to any accessory you want to shut off with the ignition gauge and warning lights, tach, etc. (NOTE: Both yellow wires are connected to the same source. Two separate wires are provided for your convenience.)
- **Green wire** to starter motor or solenoid. The smaller ring terminal goes to the solenoid.

Use a grommet where the wire goes through the firewall or any other sheet metal. If the headers are very close to the starter motor (& this harness) you may need additional heat insulation. Longacre offers Firebraid[™] insulation - See LongacreRacing.com for info.

Longacre Racing Products 977 Hyrock Blvd. Boonville, IN 47601