 


SPLINED HUB QUICK DISCONNECT INSTRUCTIONS

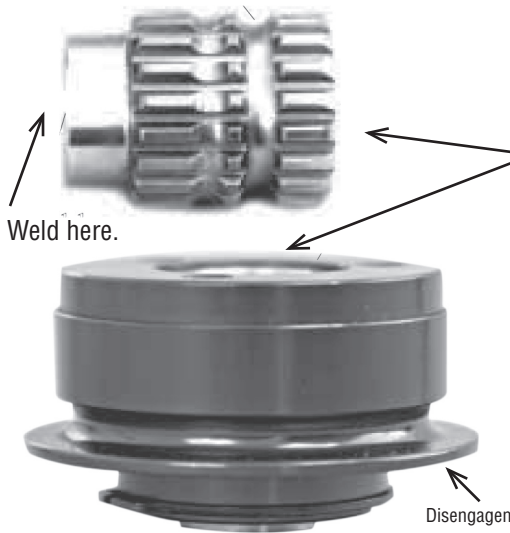

This steering shaft spline has an second safety engagement groove.

To put the wheel on, pull the Disengagement Ring up toward the driver, align the splines, and push the wheel & hub on until it bottoms. Release the Ring to lock.

Pull Ring up to remove wheel.

WE DO NOT RECOMMEND WELDING HERE. If you do, be sure NO WELD comes up above these surfaces! Grind flush as needed. Welding material on the steering shaft spline above the face of the hub where the wheel is mounted may not let the hub to engage properly, allowing the wheel to come off unexpectedly.

After installed, thoroughly check Quick Release operation. If it does not release smoothly and easily check the bolt length, welding of steering shaft spline, or anything else causing bind. Check the operation each time you use it for proper connection.

 
Use **all** included bolts and washers. If you leave out either washer or use a different bolt the hub may not release properly! Other bolts may thread into the body too far, contact the release mechanism, and affect its operation.

Longacre Racing Products
977 Hyrock Blvd.
Boonville, IN 47601

WARNING

If this quick release hub is not installed properly, it could allow the wheel to come off while on the track, possibly causing serious injury or death. It is the installer's responsibility to be certain the hub is installed properly and will release properly after installation.

SPLINED HUB QUICK DISCONNECT INSTRUCTIONS

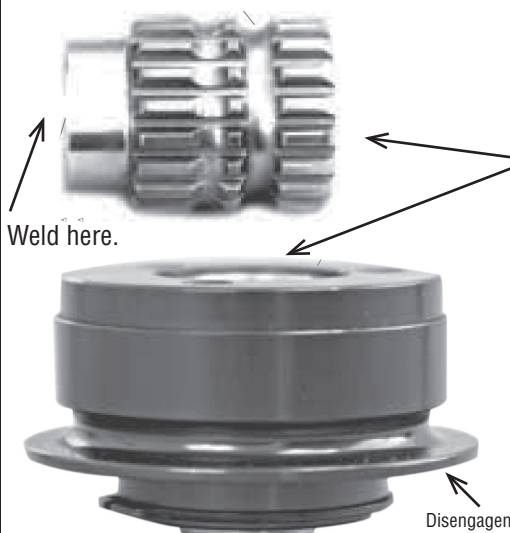

This steering shaft spline has an second safety engagement groove.

To put the wheel on, pull the Disengagement Ring up toward the driver, align the splines, and push the wheel & hub on until it bottoms. Release the Ring to lock.

Pull Ring up to remove wheel.

WE DO NOT RECOMMEND WELDING HERE. If you do, be sure NO WELD comes up above these surfaces! Grind flush as needed. Welding material on the steering shaft spline above the face of the hub where the wheel is mounted may not let the hub to engage properly, allowing the wheel to come off unexpectedly.

After installed, thoroughly check Quick Release operation. If it does not release smoothly and easily check the bolt length, welding of steering shaft spline, or anything else causing bind. Check the operation each time you use it for proper connection.

Use **all** included bolts and washers. If you leave out either washer or use a different bolt the hub may not release properly! Other bolts may thread into the body too far, contact the release mechanism, and affect its operation.

Longacre Racing Products
977 Hyrock Blvd.
Boonville, IN 47601

WARNING

If this quick release hub is not installed properly, it could allow the wheel to come off while on the track, possibly causing serious injury or death. It is the installer's responsibility to be certain the hub is installed properly and will release properly after installation.