


BASIC BRAKE LINE INSTRUCTIONS

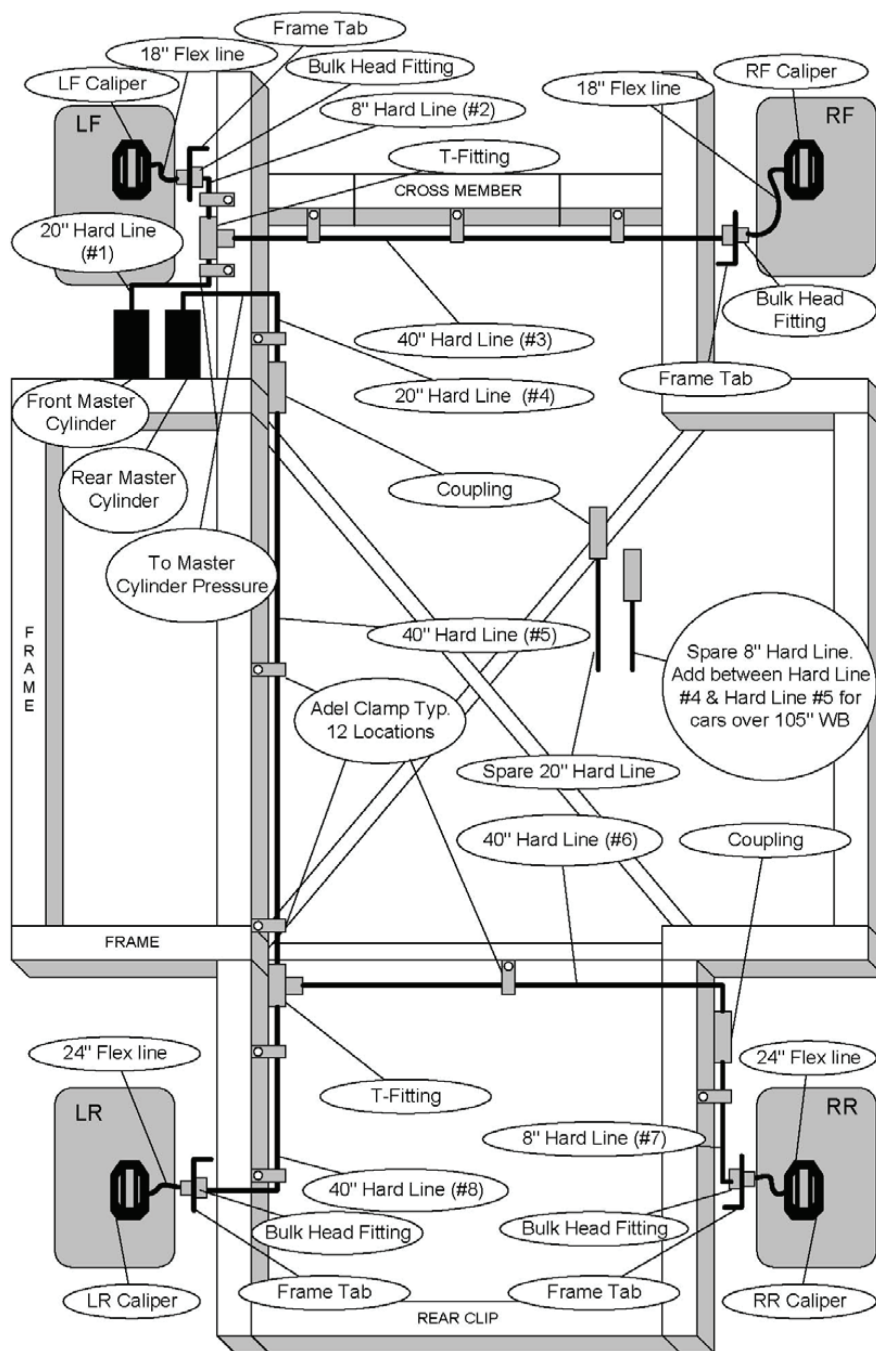

1. Pre-Install kite before painting frame
2. Attach frame tabs after locating hard lines to eliminate or reduce field made double flares.
3. Attach Adel clamps after hard lines are installed
4. Check all connections for leaks. Field Flares **MUST** be double flare type.



Longacre Racing Products
977 Hyrock Blvd.
Boonville, IN 47601