


MODULAR PLATEN INSTRUCTIONS

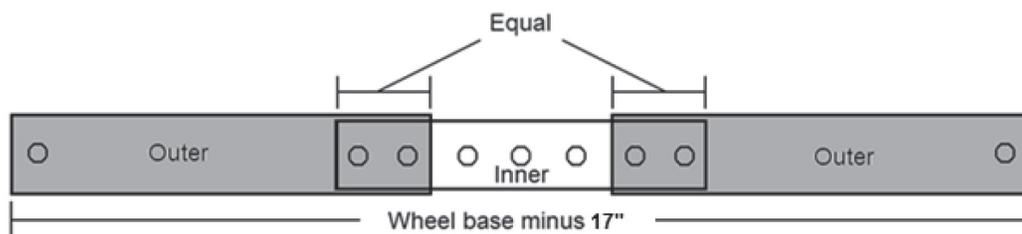

To assemble adjustable spanners, slide the inner piece into the outer piece, as shown. Be sure to overlap the outer pieces equally. To set for the wheel base, adjust the spanners to the length of your wheel base minus 17". Fasten together with the 5/16 button head bolts, washers and self locking nuts. Tighten the top set of bolts before tightening the sides. Once assembled, the ends of the spanner will clip into place between the two levelers. Be sure the spanners are COMPLETELY clipped onto the levelers before use.


***You MUST use 8 self-locking nuts, 8 washers, and 8 bolts for each spanner.**



4" feet are intended for levelers



3" feet are intended for the spanners

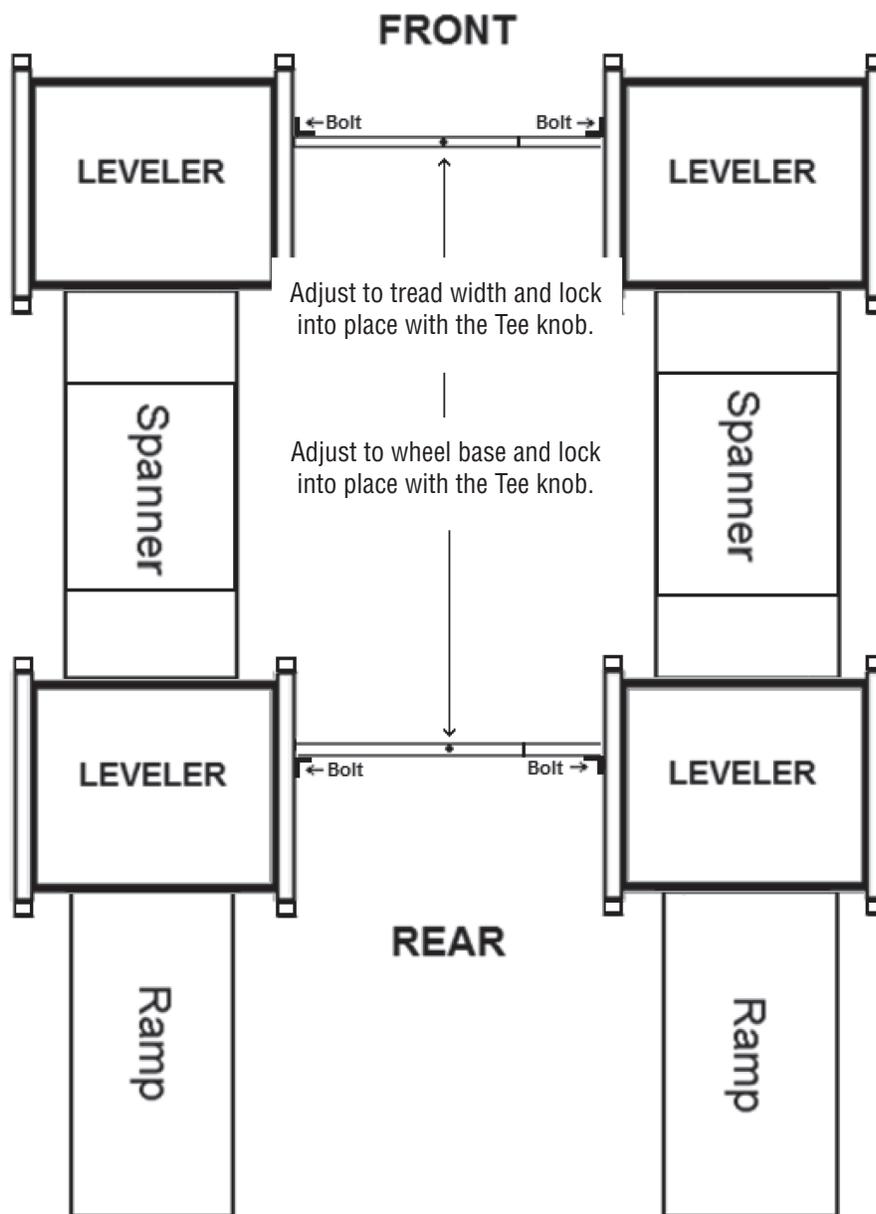

Longacre Racing Products
977 Hyrock Blvd.
Boonville, IN 47601